

Kersten

SITE MAINTENANCE EQUIPMENT

Assembly instructions for **M08256EU** Bracket for snow plough lighting kit.



Kersten (UK) Ltd

Progress House, 39 Boulton Road, Reading, RG2 0NH

tel 01189869253

Kerstenuk.com

Contents

A - Top mounting bar (1)

B - Lower mounting support (2)

C - Packing blocks (2)

D - M12x30 bolts (2)

E - M12 washers (4)


F - M12 locknuts (2)

G - M6x30 bolts (4)

H - M6 washer (12)

I - M12 locknuts (12)

J - M6x15 bolts (2)

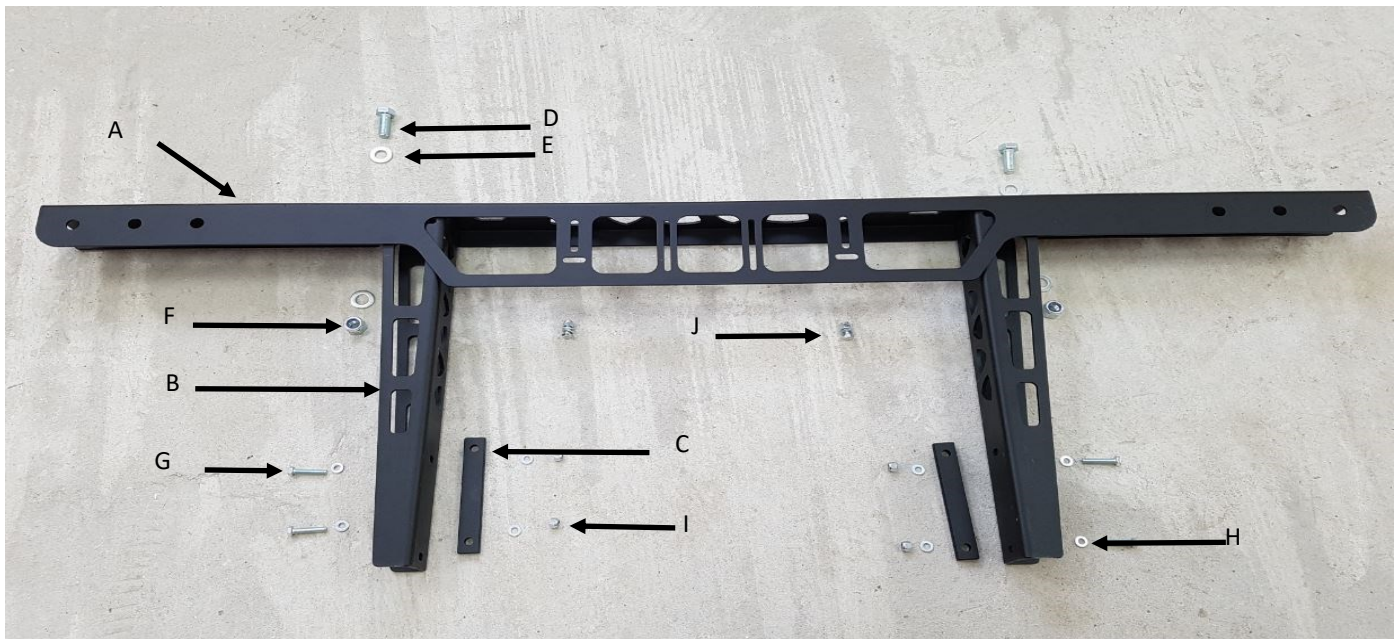

This instruction leaflet should be used in conjunction with the full instruction manual for the snowplough. This light bracket kit is designed for Meyer DrivePro ploughs. When unpacking please ensure all parts listed above are present.

Loosely assemble all items before tightening in to correct position.

1. Using "G, H and I", attach lower mounting brackets "B" to the snow plough push frame using packing blocks "C" between the plough and brackets if required.
2. Assemble top mounting bar "A" to the two lower mounting supports "B" as shown using "D, E and F".
3. Use bolts "J" to affix auxiliary number plate the frame.

For any Issues, please contact Kersten UK Ltd on 0118 9869 253